



# Installing guide for a RACHIELE Under Mount sink

Never use Silicone when installing a copper sink!

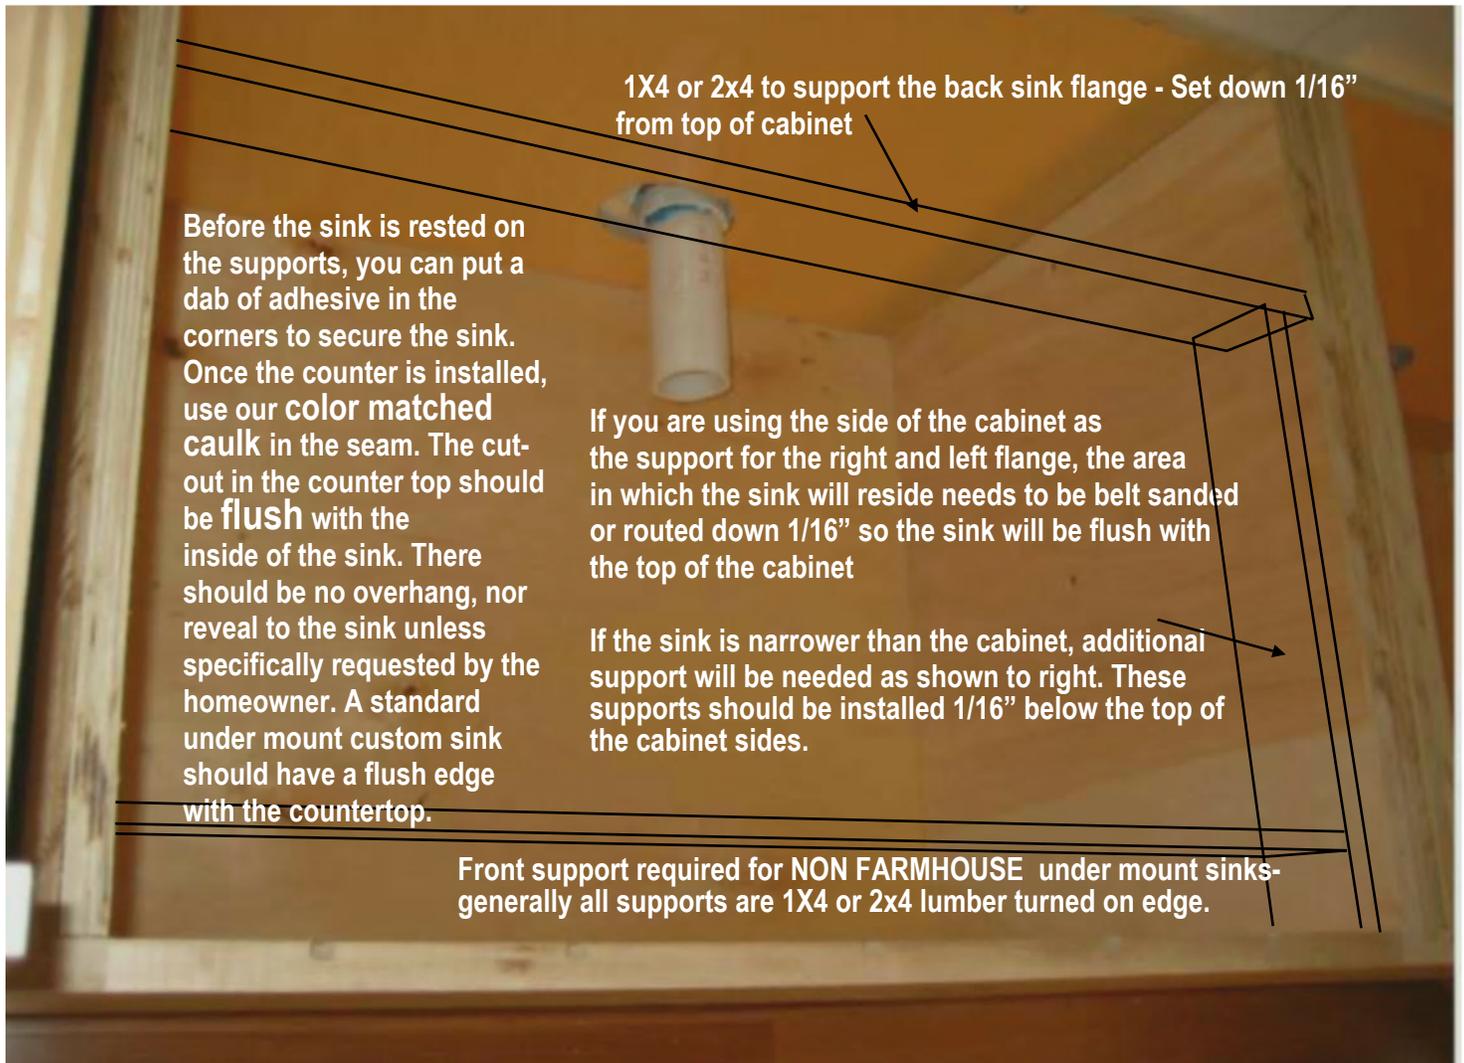

Installing a Rachiele under mount sink should be quite simple and fast. If you are installing a sink that is the same cabinet width as the cabinet, you will only need a front and rear support. You can use the side of the cabinet for support. You must rout out or belt sand down the area where the sink will rest by 1/16" - the thickness of our sink material. You would want our sink to be flush with the top of the cabinet.

If your cabinet has corner gussets or side supports, and they are in the way, they can be safely removed. I have checked with several major manufacturers. They all say they are not necessary once the cabinet is installed.

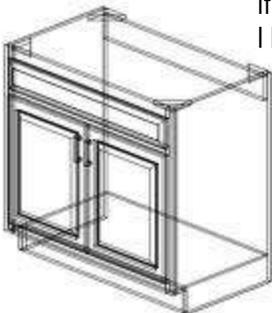

As always, I try to answer the phone evenings and weekends, so if you have questions, please call. Be sure to leave a message in the event I do not answer. I try to return all urgent calls quickly. 407-496-3596

Dino

In certain parts of the country, plywood is put down under the granite. If so, the plywood is the support for the sink. Just mark where the sink is going and rout out the area where the flange will be 1/16" down so the flange sits flush with the granite.

Please note: **This is one of many proper ways to install our under mount sinks.** Sometimes countertop suppliers will supply clips and attach the sink to the bottom of the countertop. Never support this sink from the bottom. All COPPER under mount sinks should be supported by the flanges only.

Note: Our sinks are designed to be totally supported by the flanges ONLY. NO support for the apron and bottom of sink is required. There should be air space under any metal sink to allow for evaporation of potential condensation